


# **Configurations schema Eelecta | Z-Wave Plus**



**EELECTRON S.P.A.** - Via Claudio Monteverdi, 6 20025 Legnano (MI) Italia - Tel. +39 0331 500802



### Drive an external relay via an Eelecta Homepad

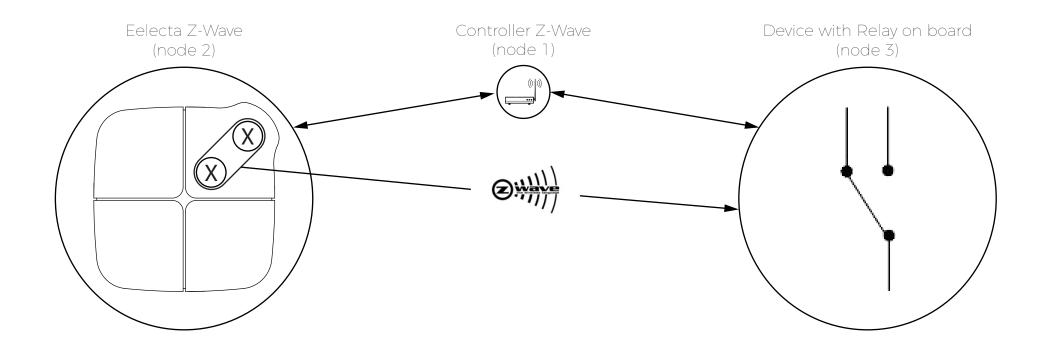

#### Eelecta setting (node 2)


Parameter: 5 | value: 2 - The LED associated with the external load will switch following the load status.

Group 1 LifeLine | value: 1, 3

Group 3 On/Off control (button 3) | value: 3



# A key of the Eelecta Homepad device and a button of an external device control the relay on board the Eelecta device

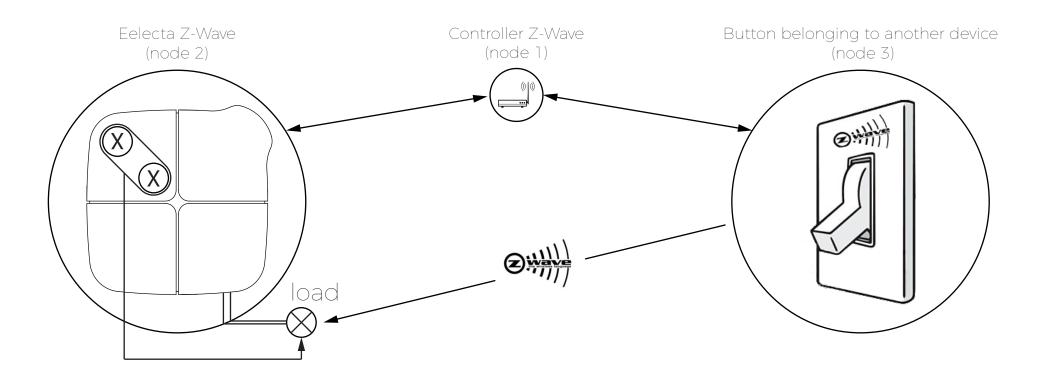

#### Eelecta setting (node 2)


Parameter: 1 | value: 1 - Eelecta pad 1 switches the on board relay.

Parameter: 5 | value: 4+1 - The LED associated with the local load will switch following the status.

Group 1 LifeLine | value: 1, 3



## An Eelecta Homepad drives its own relay with a pad; The same relay is controlled by an button of another Eelecta Homepad

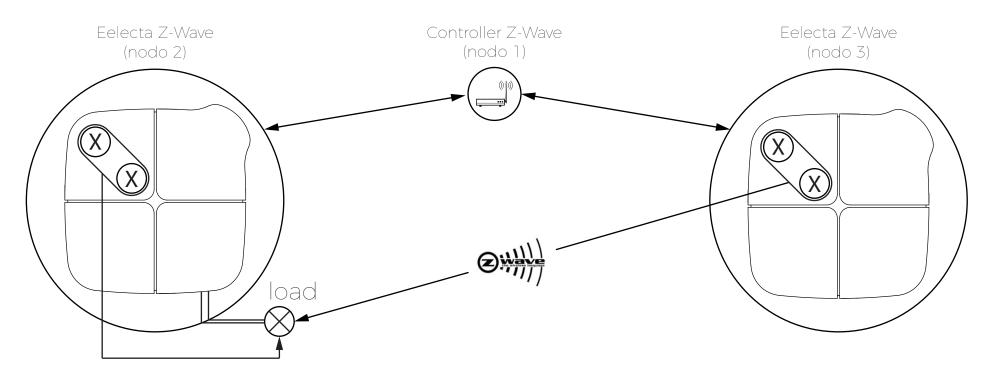

#### Eelecta setting (nodo 2)

Parameter: 1 | value: 1 - Eelecta pad 1 switches the on board relay.

Parameter: 5 | value: 4+1 - The LED associated with the local load will switch following the status.

Group 1 LifeLine | value: 1, 3

#### Eelecta setting (nodo 3)

Parameter: 1 | value: 0 - Eelecta pad 1 NOT switches the on board relay.

Parameter: 5 | value: 2 - The LED associated with the external load will switch following the load status.

Group 1 LifeLine | value: 1, 2

Group 2 On/Off control (button 1) | value: 2



### The Eelecta Homepad devices implement a relay

